




# Toshiba NB250-108 Wlan Karte Replacement

Replacing the WLAN Card

Written By: Guenter Hildebrandt

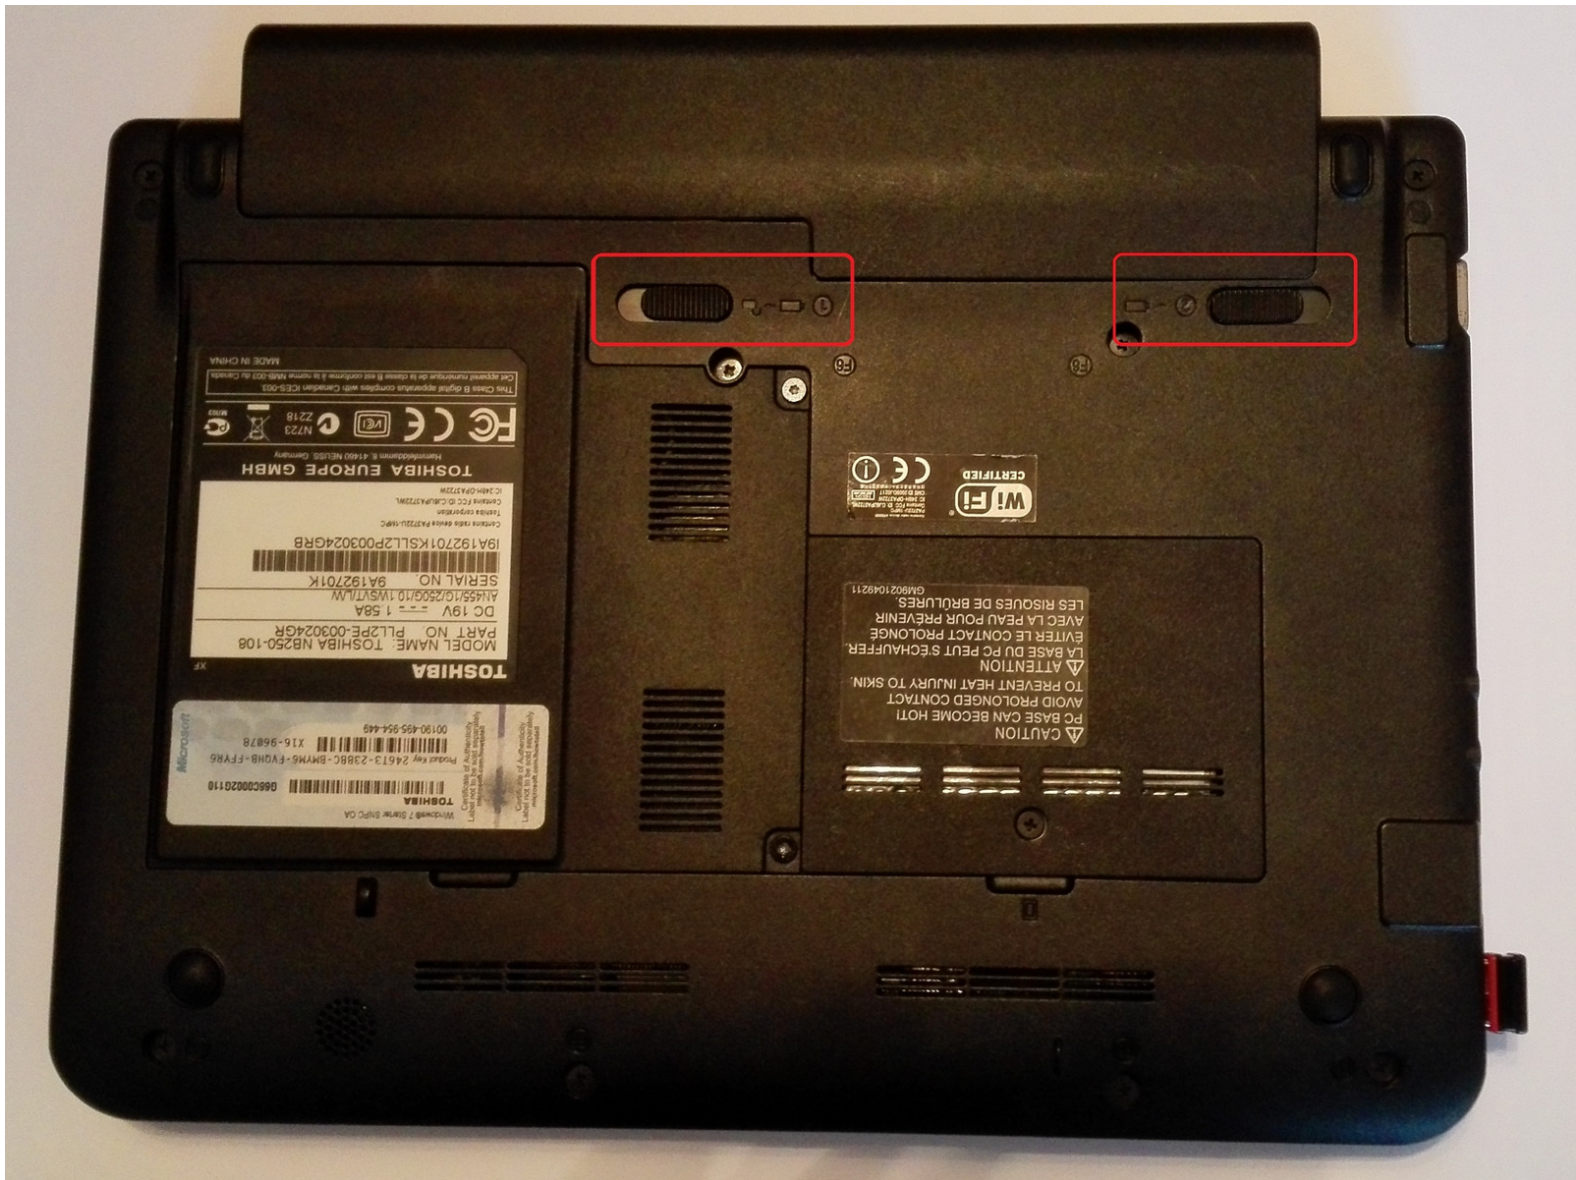

# INTRODUCTION

Replacing the WLAN Card


---



## TOOLS:

- [T6 Torx screwdriver](#) (1)
  - [Phillips # 1 screwdriver](#) (1)
-


## Step 1 — Remove battery

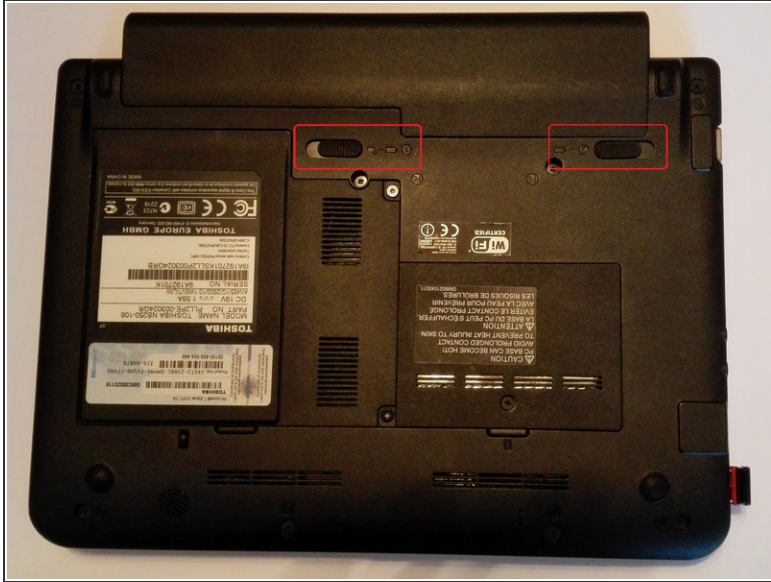

- Save your work.
- Turn off the computer. The LED power indicator is off.
- ⚠ Disconnect all cables connected to the computer and cable equipment.
- Close the display and place the computer upside down as shown in the picture down.
- Slide the safety lock (on the left) to the unlock position (to the left) to enable sharing.
- Slide the battery release latch (right) to the right and hold it in place in order to release the battery pack, and remove the battery pack to the back of the computer.



## Step 2 — Remove Wifi card

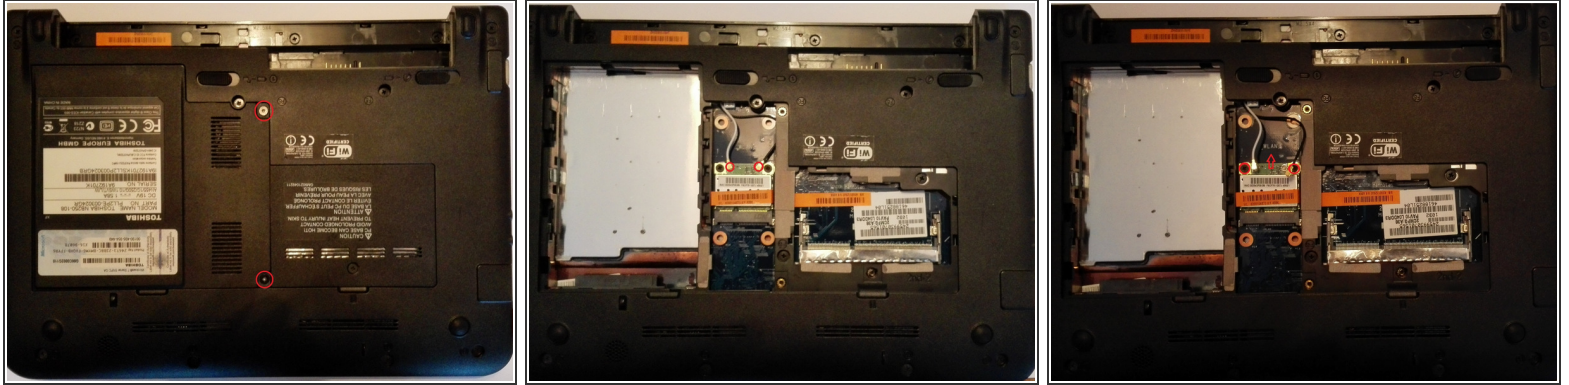

- Remove it now the two screws (Torx T6) of the cover disk and WLAN card. Remove the cover by lifting and slight pull on the right side.
- Solve the gray and black wire to the top of the WLAN card by pulling it with fingernails upwards.
- Remove the 2 black screws (Phillips # 1) which hold the card in place. Pull the WLAN card up toward battery from the bay.
- Insert the WLAN card securely on their work surface.

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.

This document was last generated on 2017-06-19 01:14:48 AM.